

To Clean the Mandoline:

All pieces of the Mandoline Slicer are dishwasher safe. You may wash the julienne cartridges with the cartridge guard covers attached on the top shelf dishwasher rack. Always wash these parts blade side down.

To clean julienne blades manually, carefully use a long handled bristle brush. Only move the cleaning brush in the direction of the blades.

(PLACE ON TOP SHELF OR IN THE FLATWARE COMPARTMENTS OF YOUR DISHWASHER OR WASH BY HAND IF NECESSARY.)

Storage:

- K** Place main slicer cartridge in mandoline slicer. Fold foot underneath the body.
- L** Place covered blade cartridges in supplied storage container. Line up the cartridges with the marking on the bottom of the storage container.



®/™ © 2013 KitchenAid. All rights reserved.

Manufactured under license by Lifetime Brands, Inc., Garden City, NY 11530

KitchenAid®

Mandoline Slicer

 
 
Instructions



FOR THE WAY IT'S MADE.®

USE OF FOOD HOLDER ASSEMBLY:


- A** Secure food to the underside of the food holder assembly. Do not hold food with hand, always use food holder assembly. Always make sure food is precut to size so it fits completely within the food holder assembly.
- B** Note the front/back markings on the food holder assembly as you align the guide. The "FRONT" marking should face the retractable blade guard.
- C** Start pressing down and forward gently on the loaded food holder assembly. Slide food down the table track of the mandoline slicer passing across the blade and then back.
- D** The retractable swing arm will help keep the sharp blade covered at all times during use.

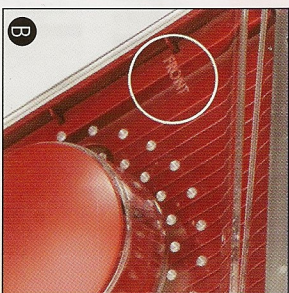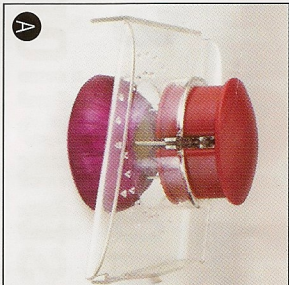

Blade assembly is sharp. Handle carefully.

USE FOR BASIC SLICING:

 
- E** Turn adjustable dial on the side to adjust the height of the main table cartridge floor. You can achieve the desired thickness for slicing various fruits and vegetables (from thinnest slice setting of 1/32" to thickest slice setting of 5/16").

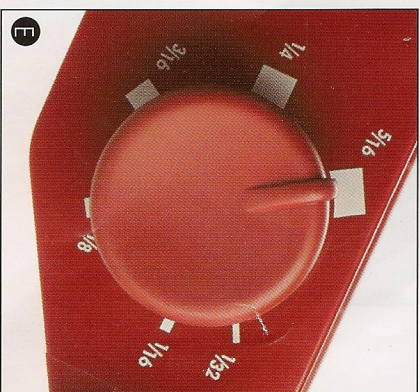

CHANGING OF BLADES:

To Remove/Replace Main Cartridge:

 - F** Set table to the 5/16" setting. Insert fingers into openings in the main cartridge table, then lift the main cartridge straight up to remove.
- G** Again, with the knob dial in the 5/16" position, re-insert the main slicer cartridge. First line up notches with the inside of the mandoline slicer, and then place back down into the main body.

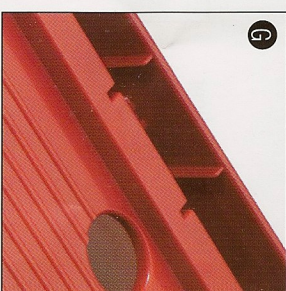

To Insert Julienne Blade Cartridges Into Main Frame:

Always use the covers on the cartridges whenever removing or replacing them from the assembly. **Make sure dial is set at 5/16" setting** prior to loading for both julienne cartridges.



- H** Insert covered julienne blade cartridge by lining up above the notches and dropping down into place into the main frame.
- J** Holding the cartridge by the handle, pull directly back until the side tabs are visible, then lift up the cartridge cover.

To Remove Julienne Blades:

- Replace blade cover over the julienne blade cartridge. To do this, place the blade cover directly over the julienne cartridge with two side tabs aligned above the corresponding slots. Drop down so tabs locate into the slots, then slide guard cover directly forward until a positive and audible snap sound is heard. Carefully lift up covered cartridge directly to remove.